


EPOS

EXPAND 30 | EXPAND 30T | EXPAND 40 Series

Battery Removal Guide

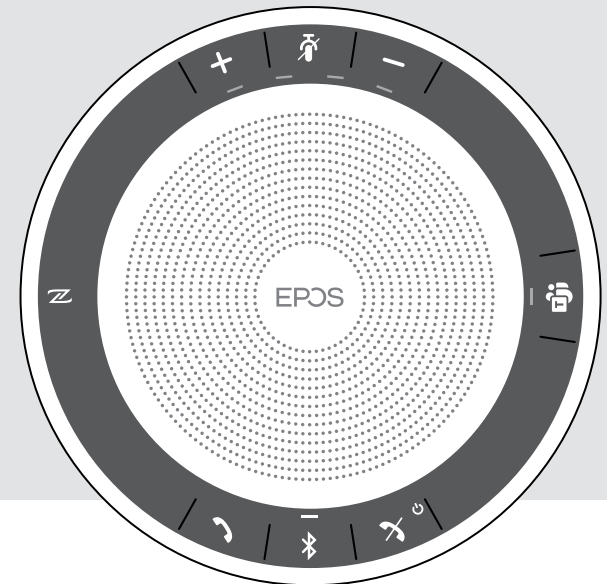

DSEA A/S



Kongebakken 9, DK-2765 Smørum, Denmark

www.eposaudio.com

Publ. 04/22, A02





THE POWER OF AUDIO

Battery Removal Guide

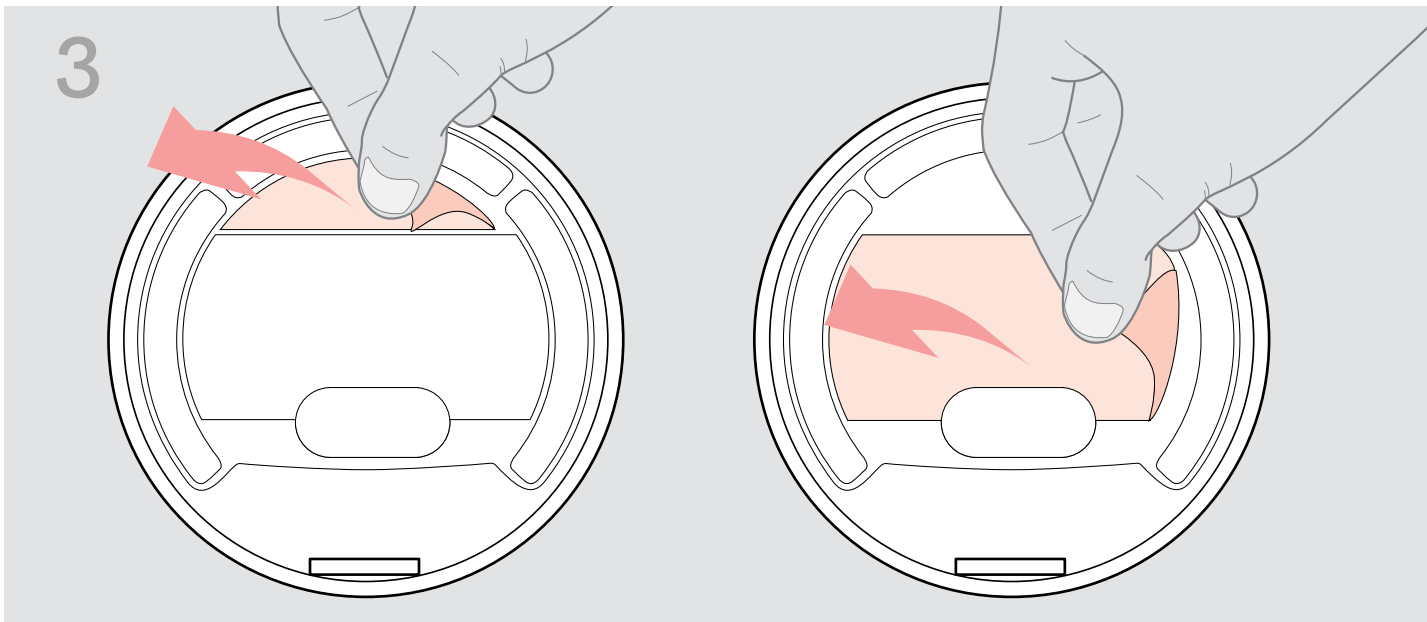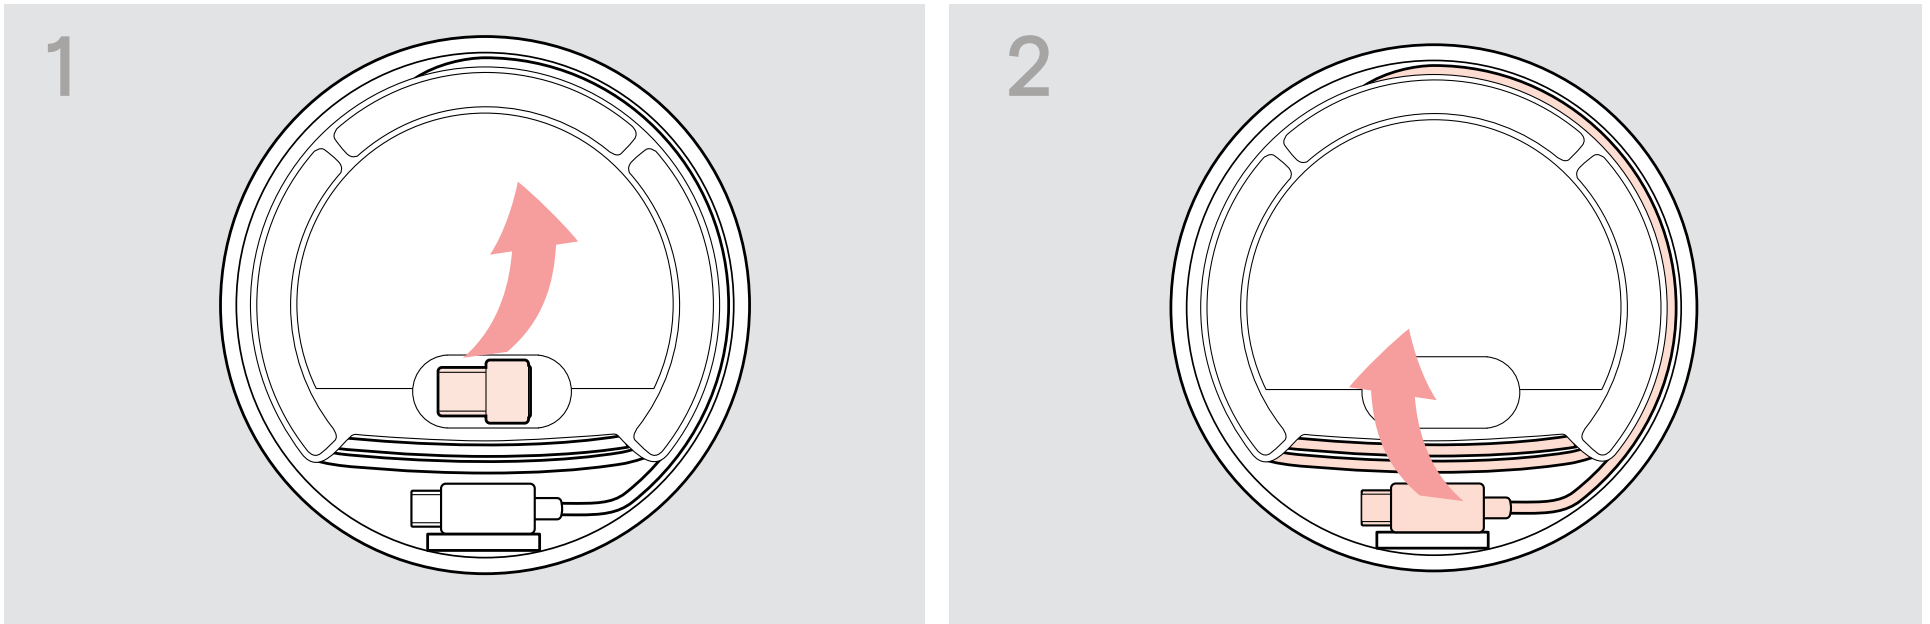

1. Remove the dongle.
2. Release the USB plug from the holder and unwind the cable.
3. Peel off the two bottom labels.

Battery Removal Guide

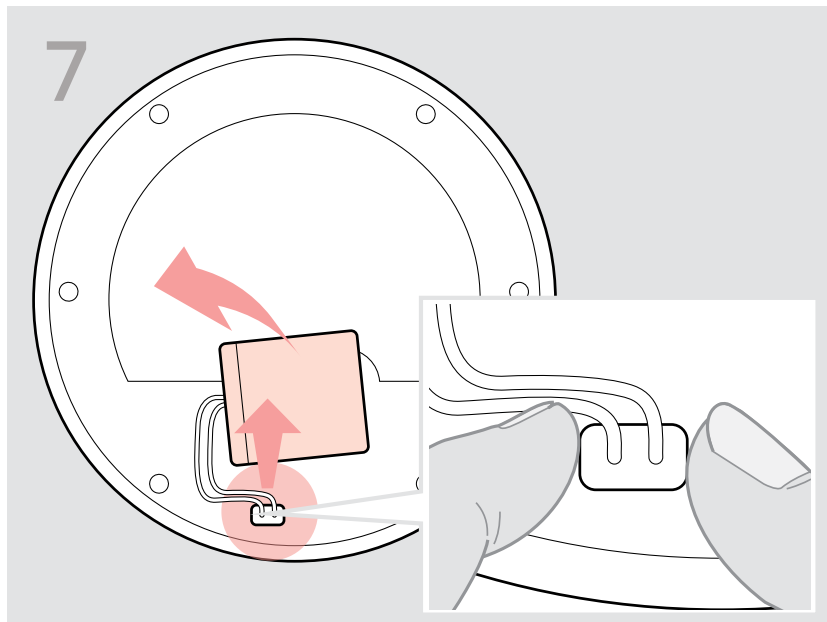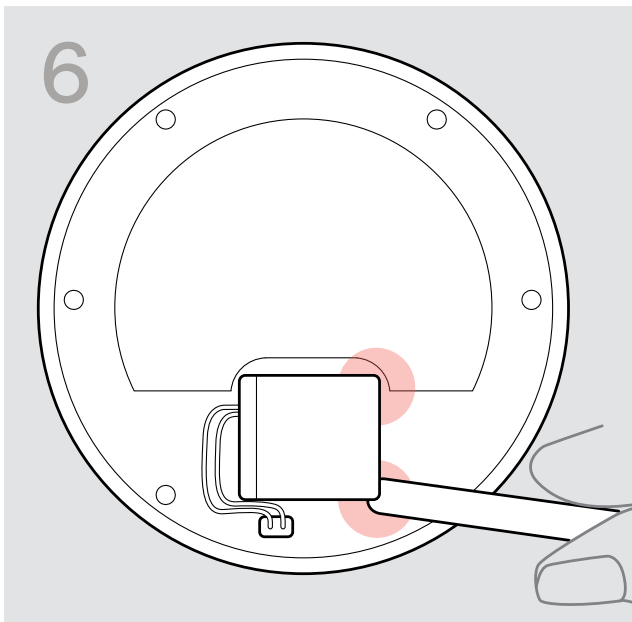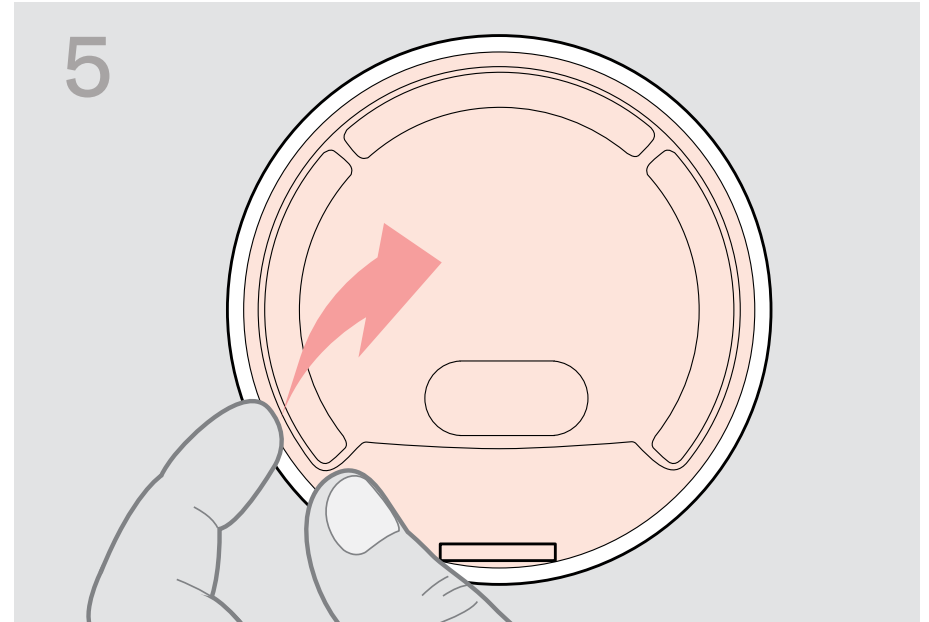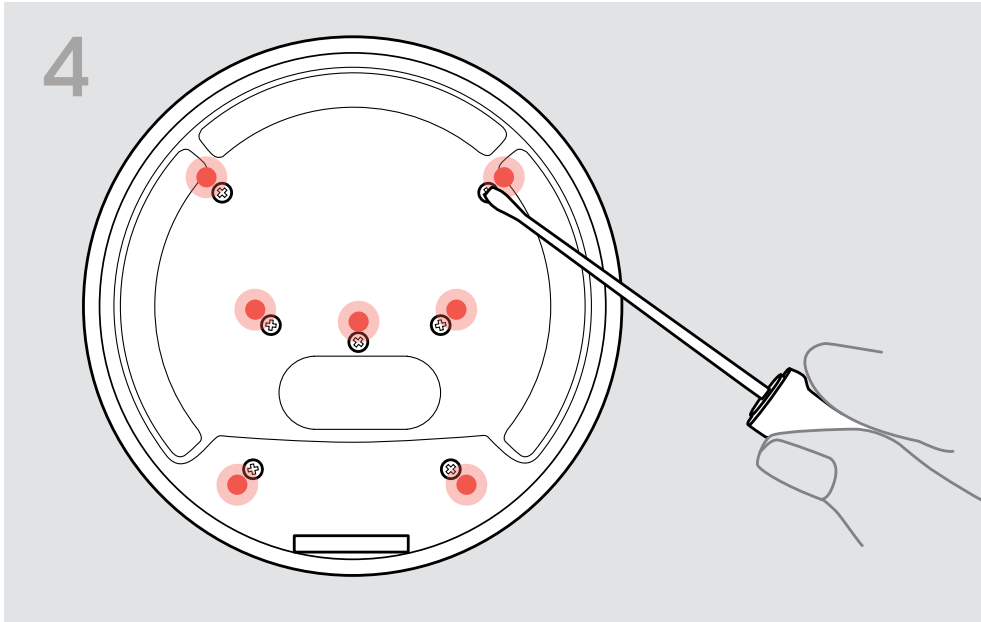

4. Remove the 7 screws with a screwdriver.
5. Open the lid.
6. Use a plastic stick to unclench the rechargeable battery.
7. Unplug the connector and remove the rechargeable battery.