

EPOS

IMPACT SDW 60 HS

Battery Removal Guide





DSEA A/S

Kongebakken 9, DK-2765 Smørum, Denmark
www.eposaudio.com

Publ. 12/21, A01




THE POWER OF AUDIO

Battery Removal Guide

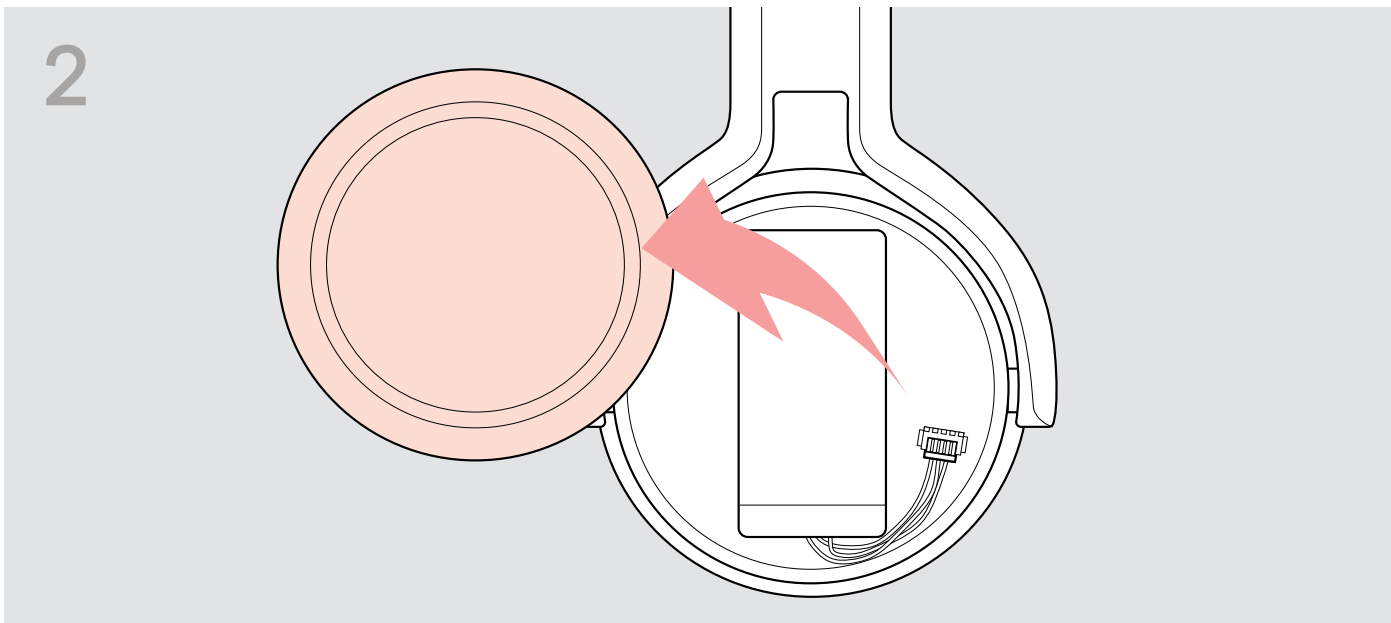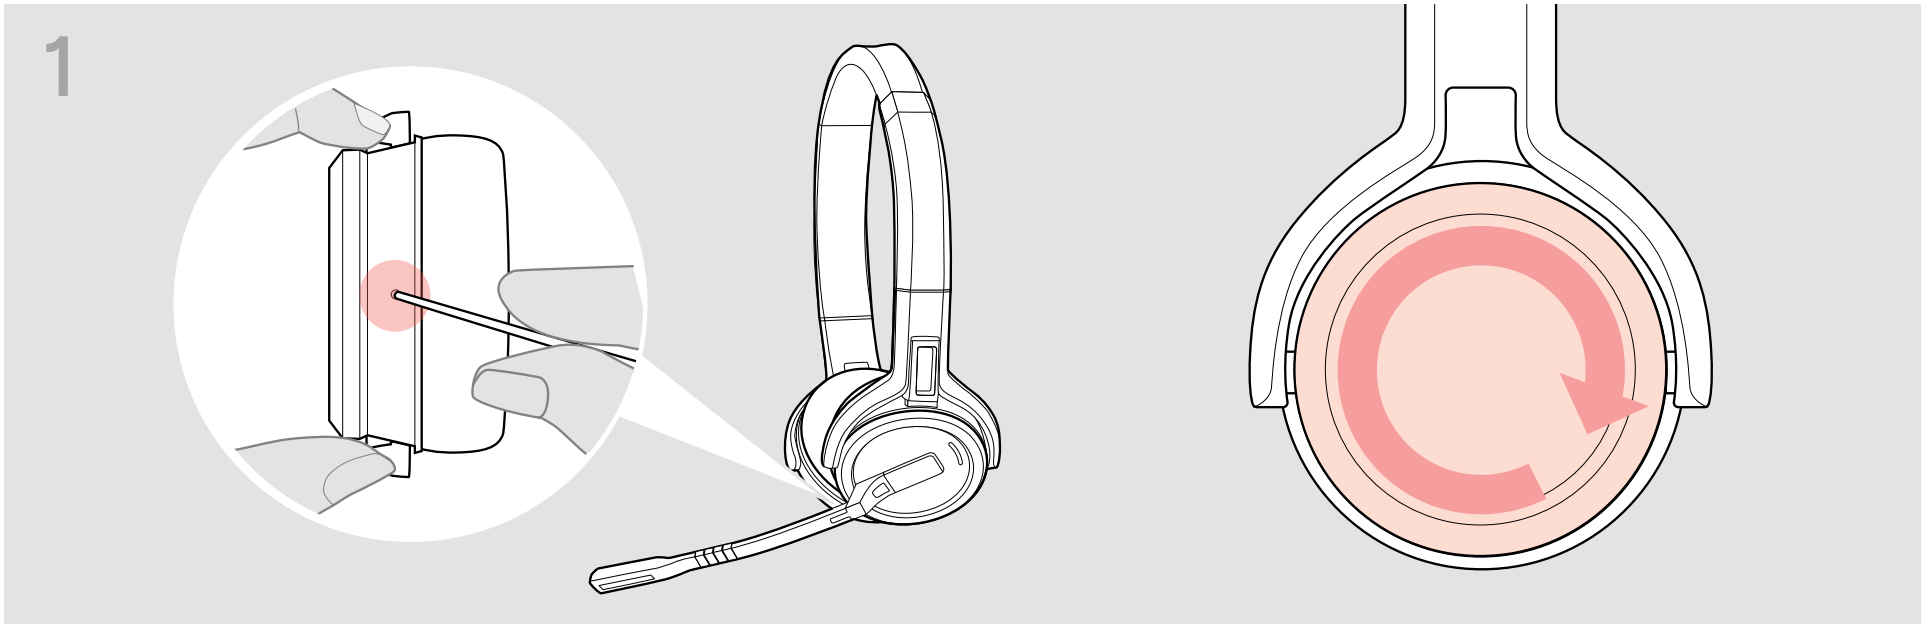

1. Use a paper clip or similar tool to press the unlock button and turn the cover a bit. The battery compartment lifts a bit.
2. Gently remove the battery compartment cover.

Battery Removal Guide

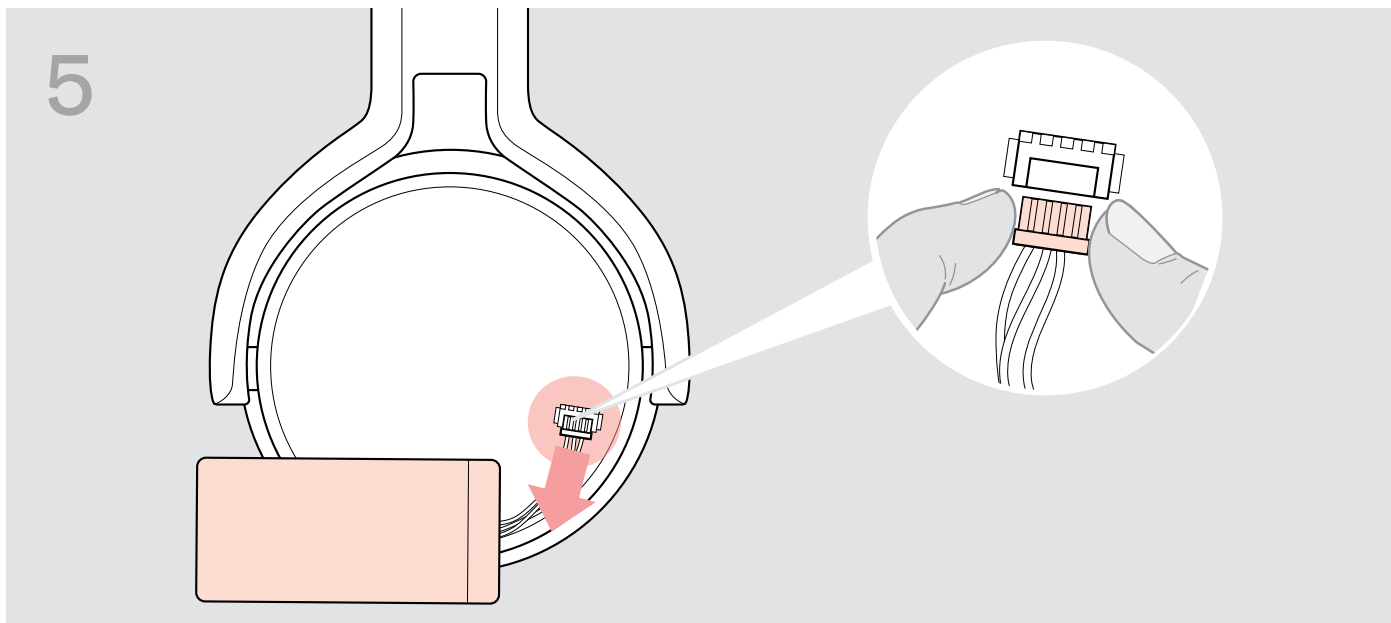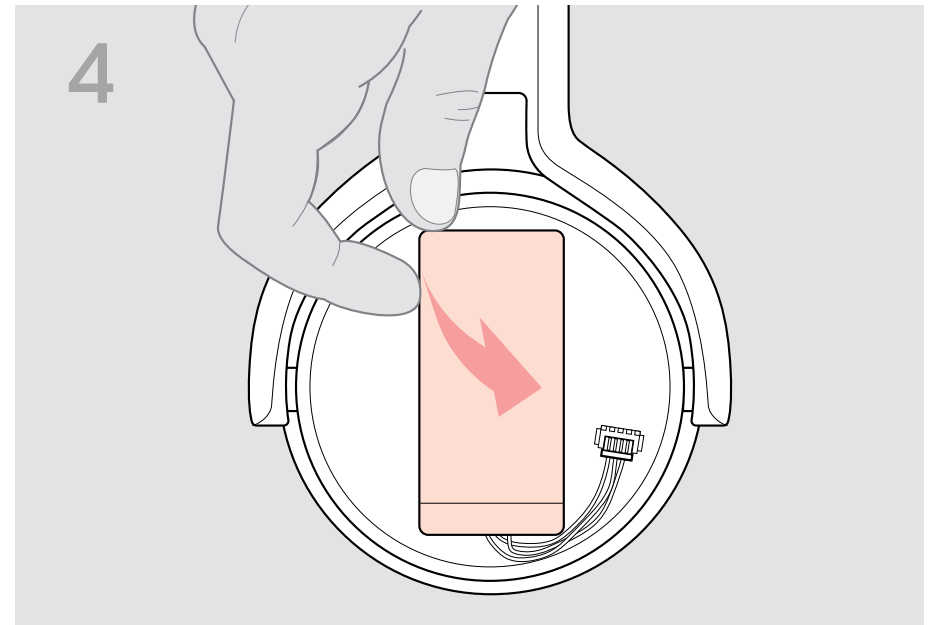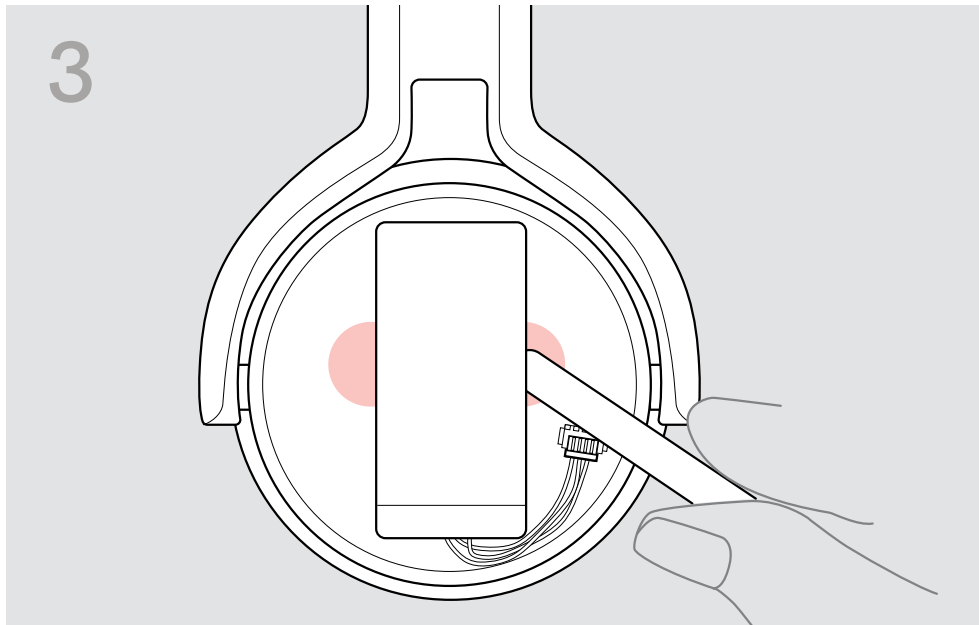

3. Use a plastic tool (e.g. small plastic lifting rod) to loosen the adhesive of the rechargeable battery.
4. Lift the rechargeable battery.
5. Unplug the connector and remove of the rechargeable battery.